



VASCO CLIMATE CONTROL QUICK GUIDE


1. VASCO RF RADIATOR THERMOSTAT (118202000009016)

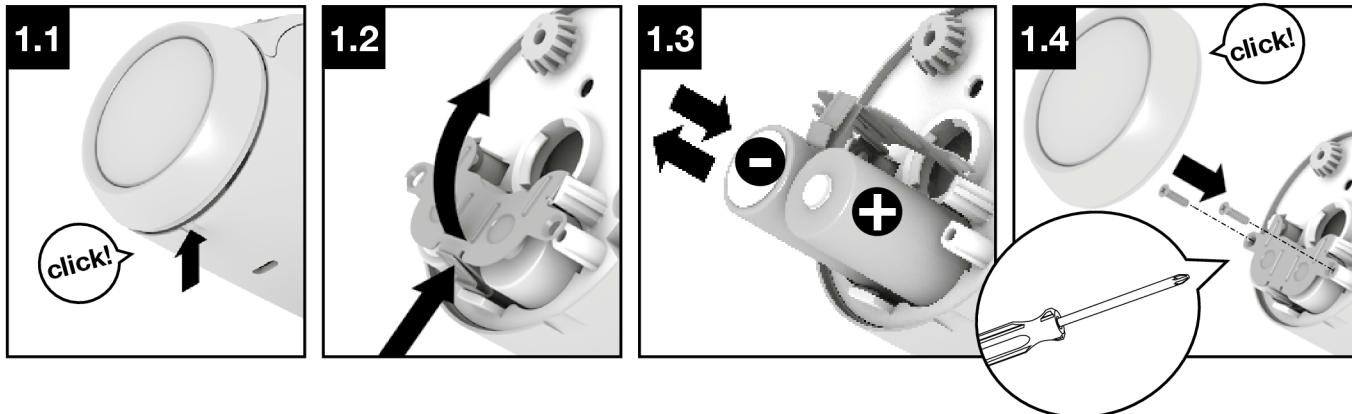

VASCO FLATLINE / BRUGMAN /
SUPERIA RADIATOR
HEIMEIER OVENTROP /
HONEYWELL / COMAP* VALVE

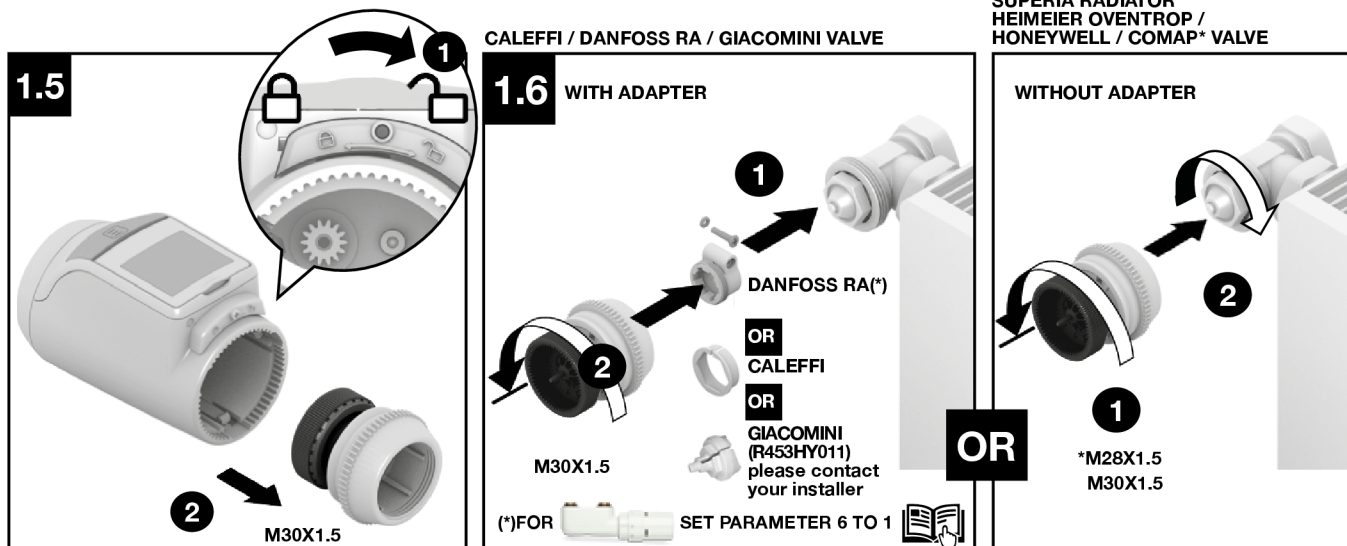


OPTIONAL HEATING SOURCE CONTROL (11FH30011)

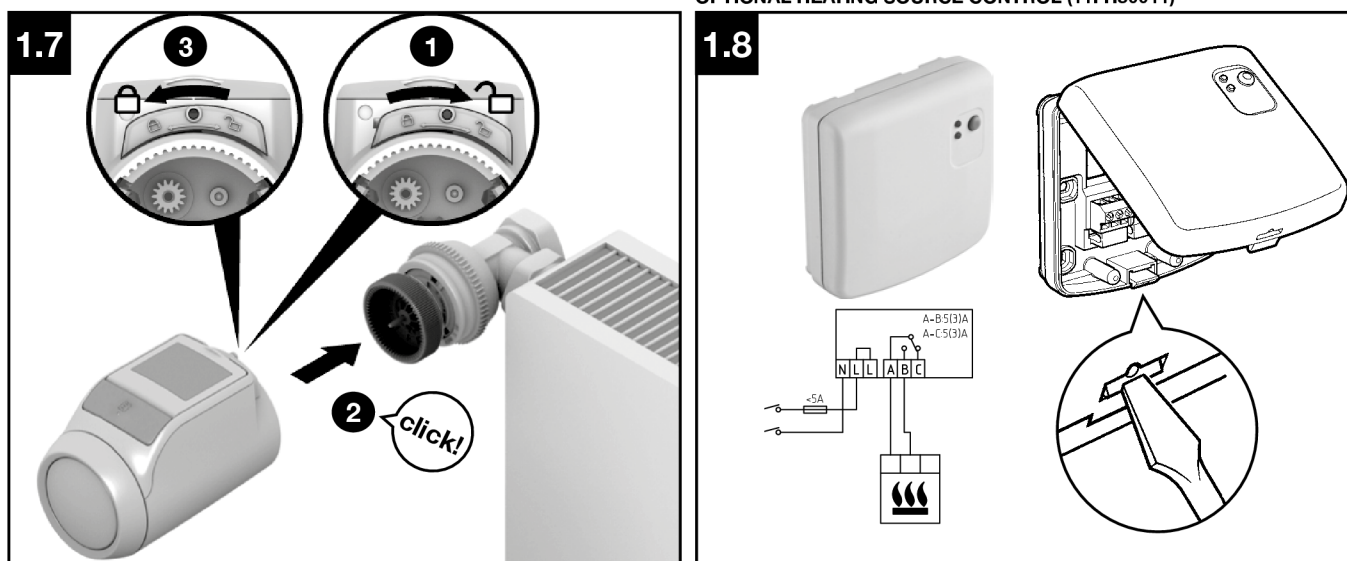


2.VASCO RF UNDERFLOOR HEATING ZONE CONTROLLER (11FH30009)

2.1

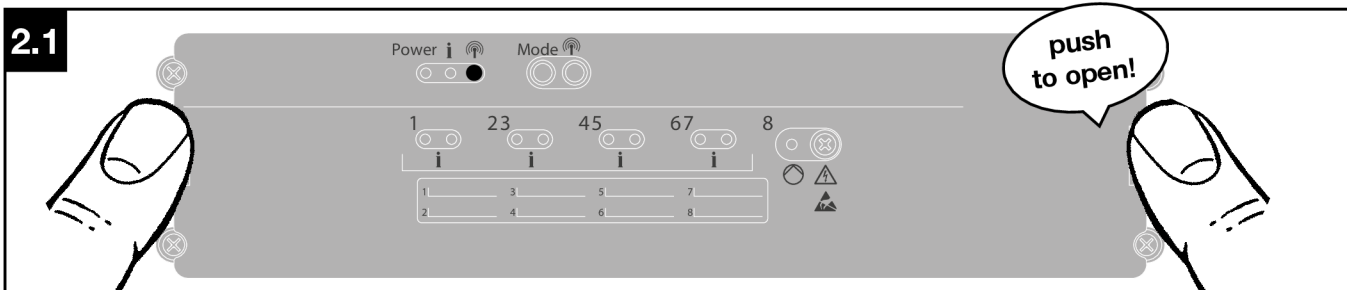

2.2

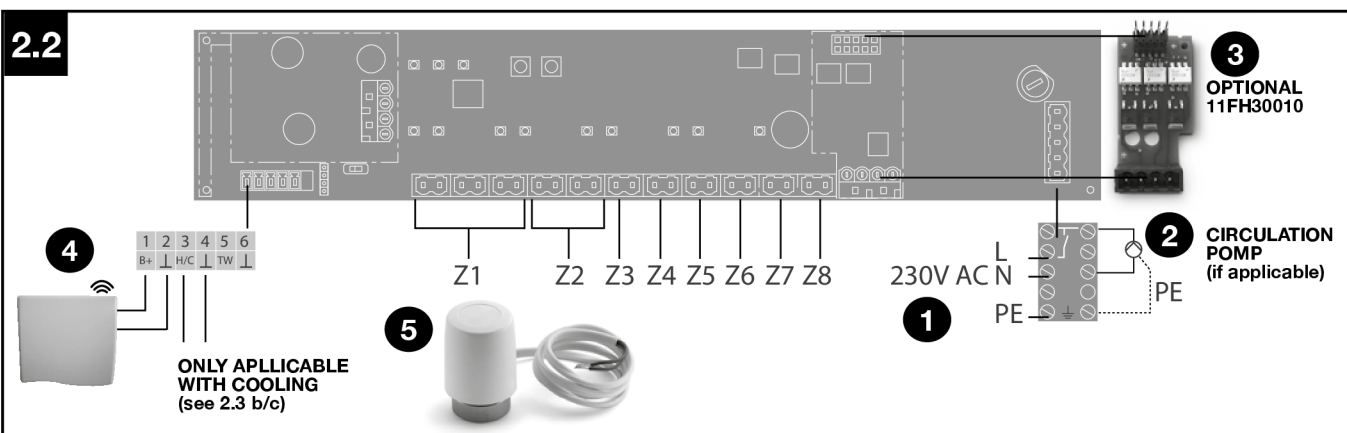


ONLY HEATING

HEATING AND COOLING WITH MANUAL CHANGE OVER

2.3.a

11FH30011

To be connected with zone controller

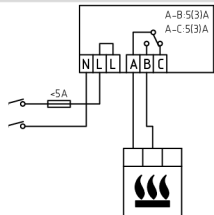


2.3.b

11FH30011

To be connected with zone controller

11FH30009

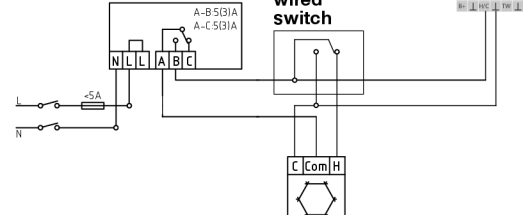

HEATING AND COOLING CHANGEOVER VIA VASCO APP


2.3.c

11FH30011


11FH30011

11FH30009

To be connected with zone controller
















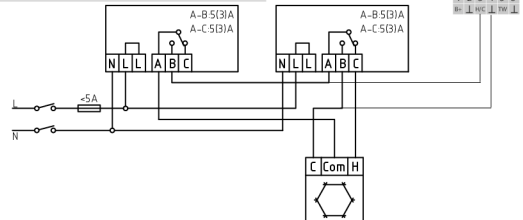


To be connected with zone controller


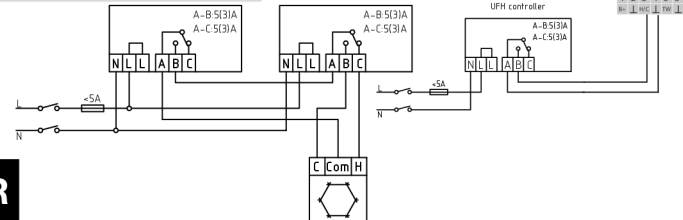


OR

VASCO RF ROOM THERMOSTAT (11FH55041)

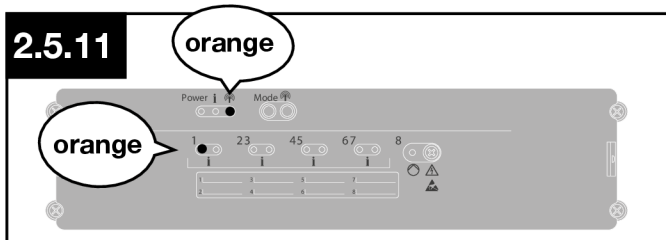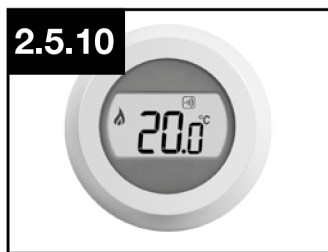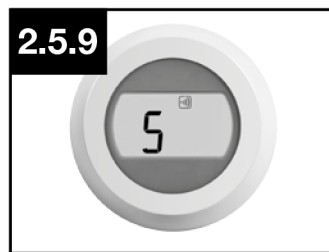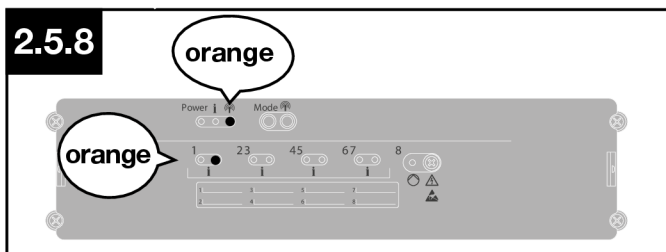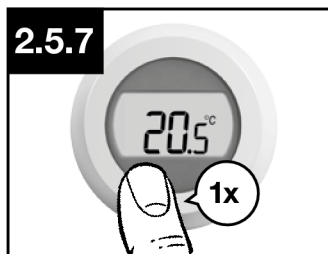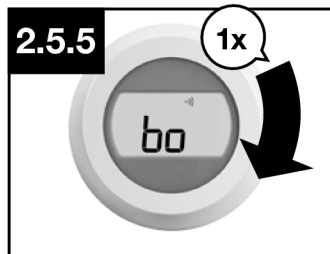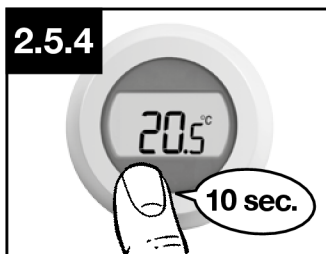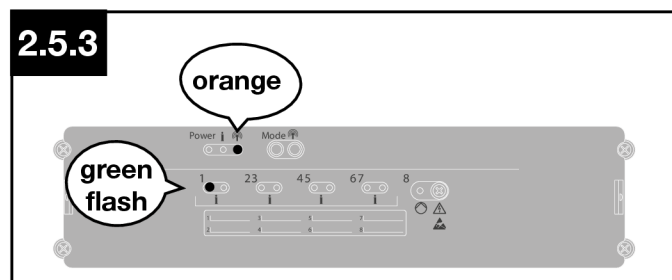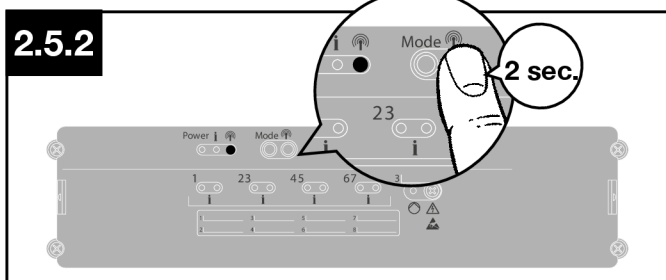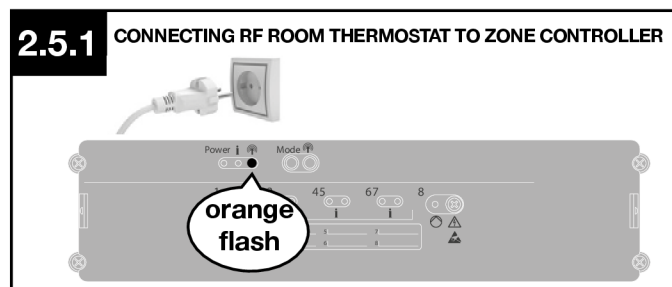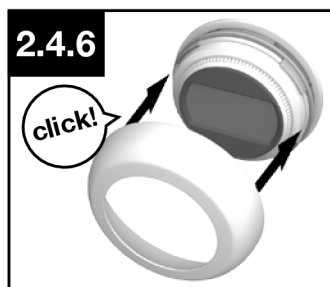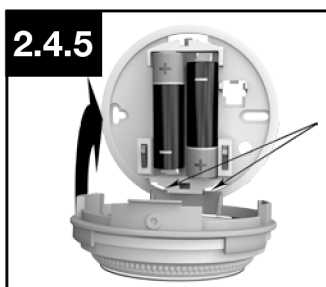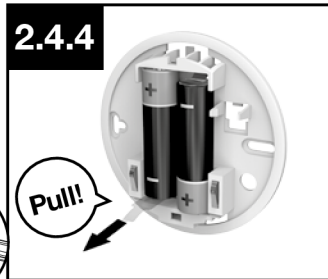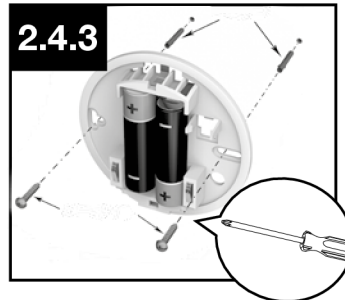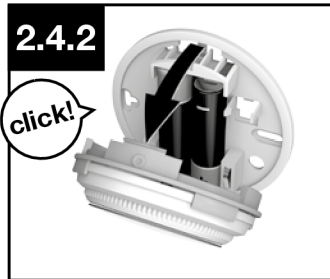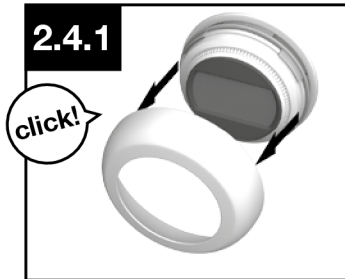


CONNECTING
NEXT RF ROOM THERMOSTAT



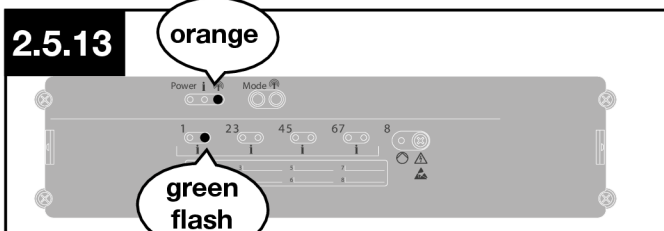
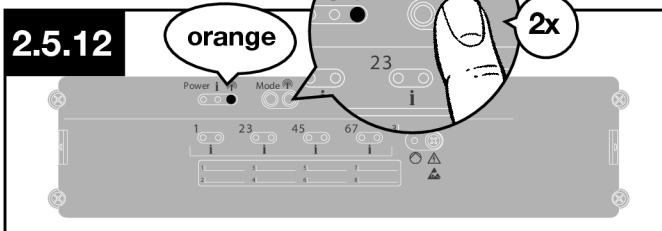


TO EXIT: PRESS REPEATEDLY UNTIL 'POWER' LED = GREEN

**REPEAT STEP 2.5.4 TO 2.5.13
TO CONNECT NEXT ZONE**

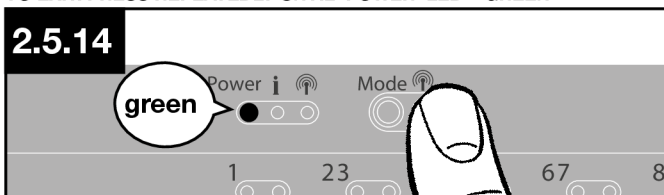

CONNECTING OPTIONAL HEATING/COOLING SOURCE RELAY (see step 2.3 a/b/c)
WITH ZONE CONTROLLER

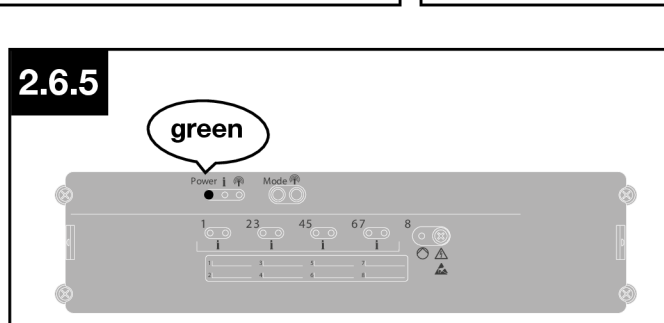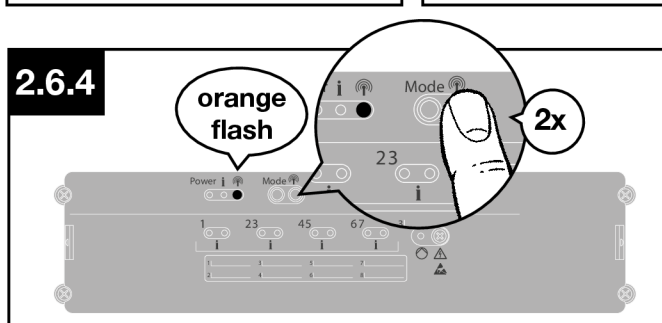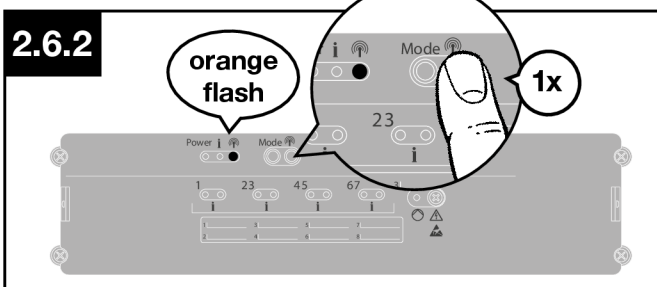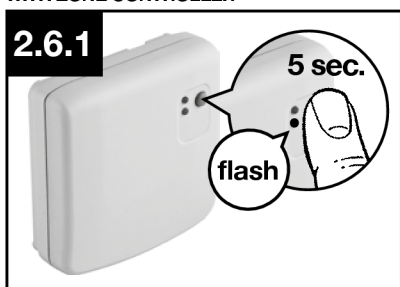

3. VASCO GATEWAY AND APP CONTROL

