

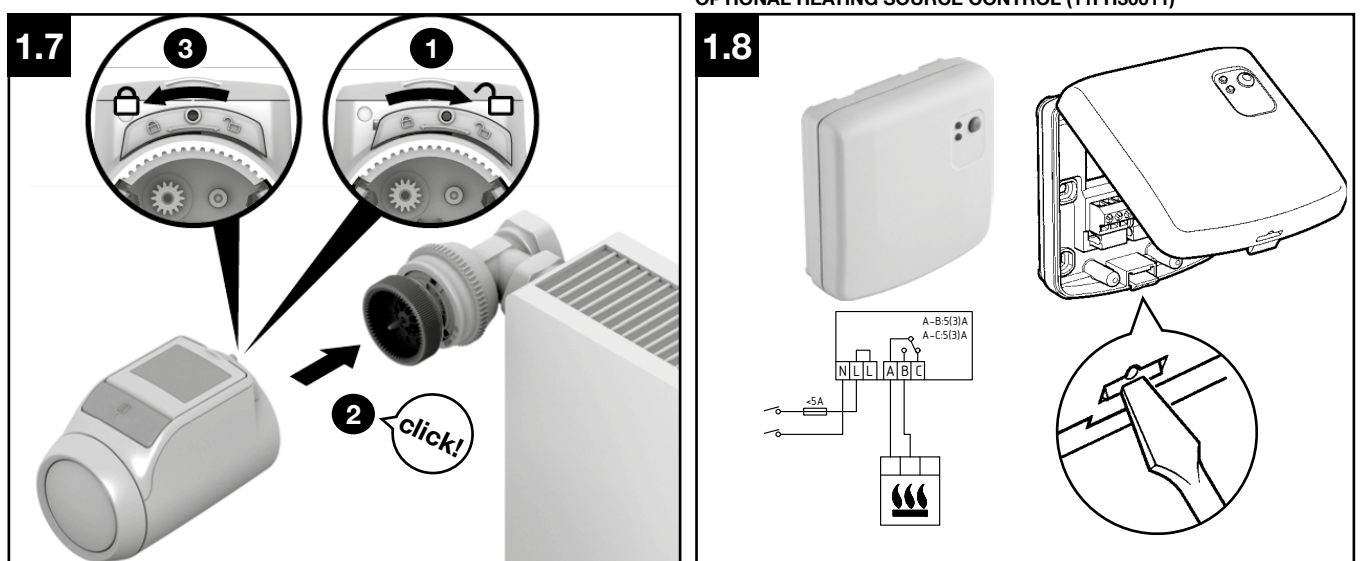
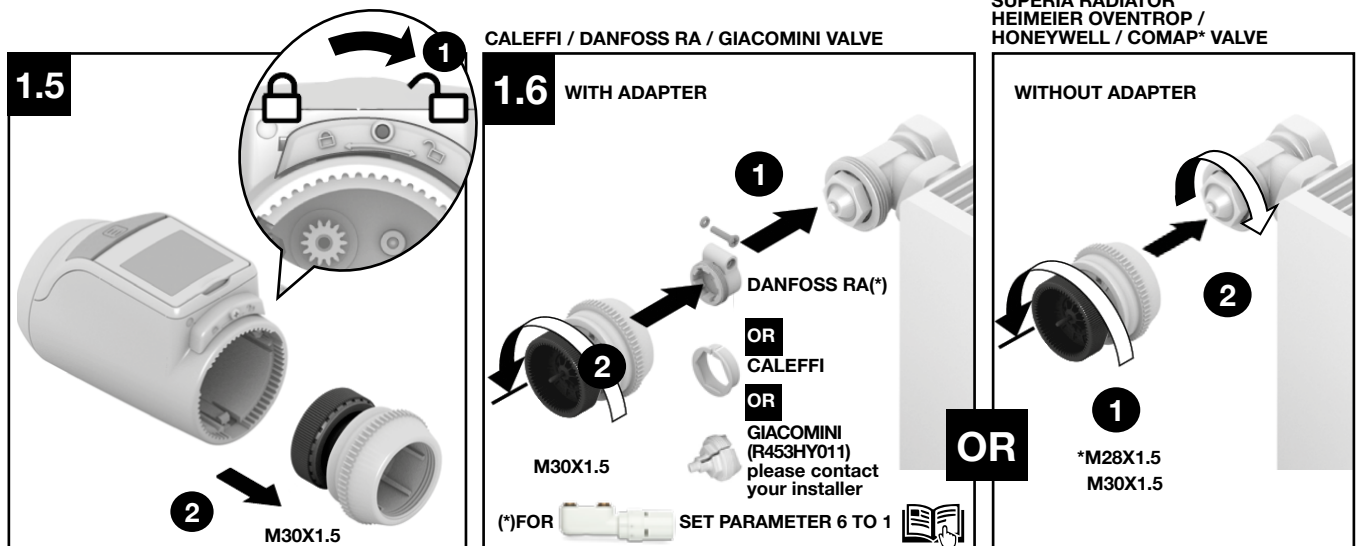
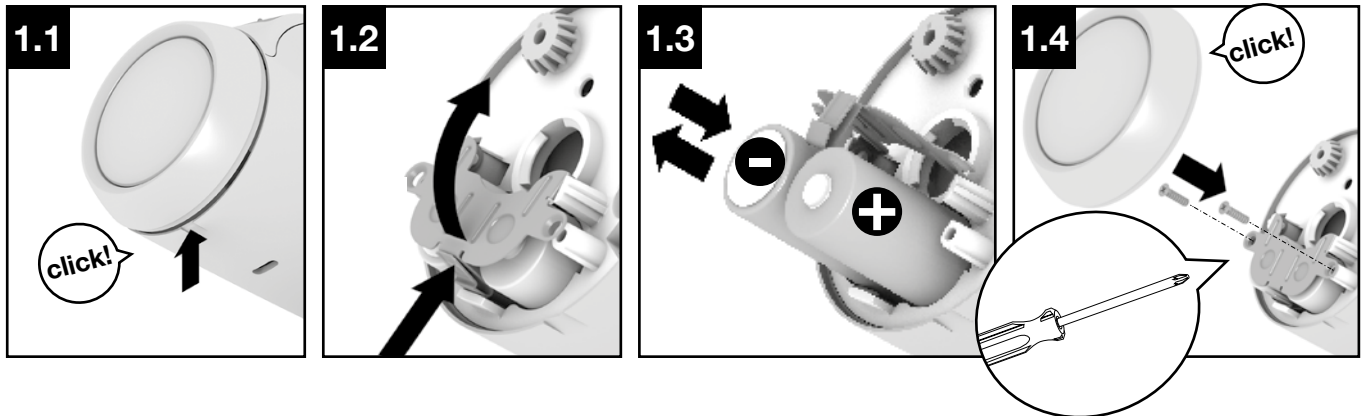


VASCO CLIMATE CONTROL QUICK GUIDE


1. VASCO RF RADIATOR THERMOSTAT (118202000009016)

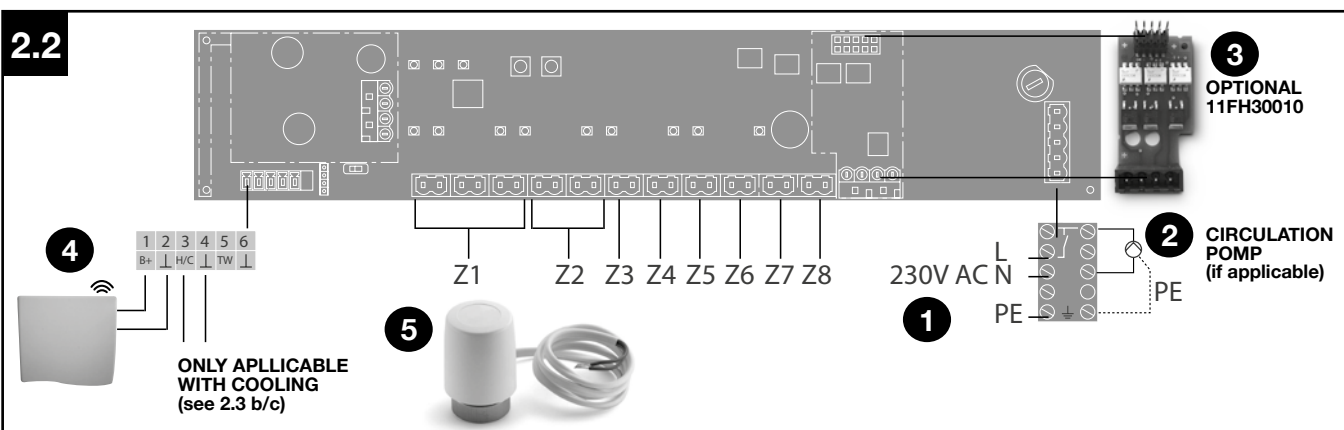


2.VASCO RF UNDERFLOOR HEATING ZONE CONTROLLER (11FH30009)

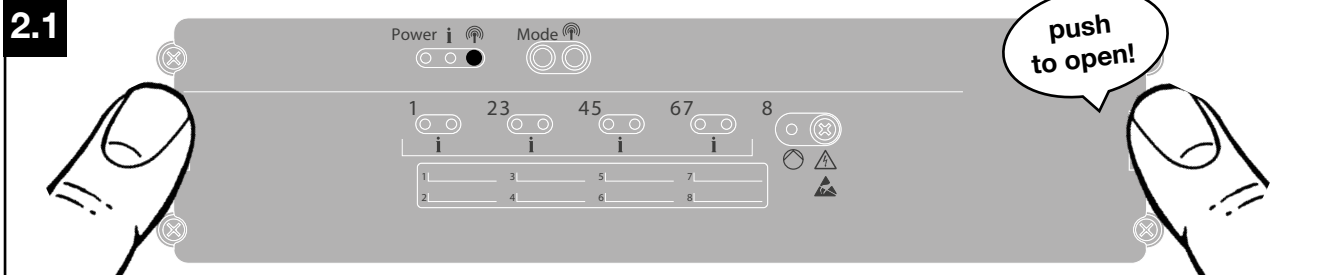


ONLY HEATING

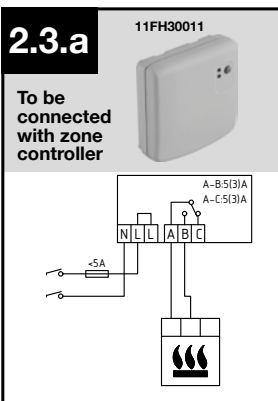


HEATING AND COOLING WITH MANUAL CHANGE OVER

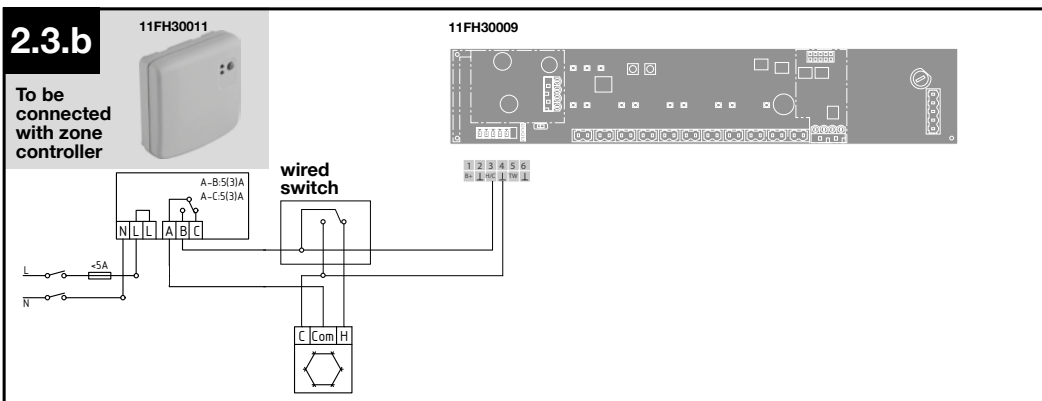














HEATING AND COOLING CHANGEOVER VIA VASCO APP

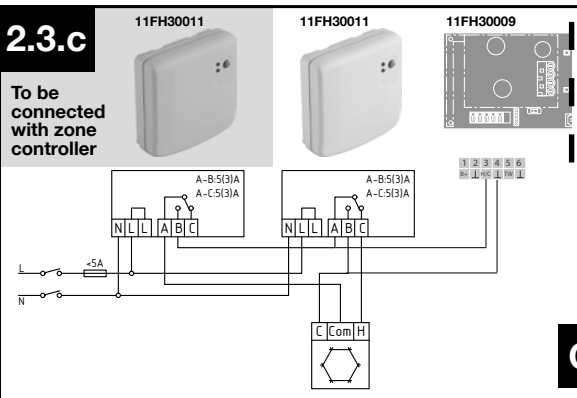



OR

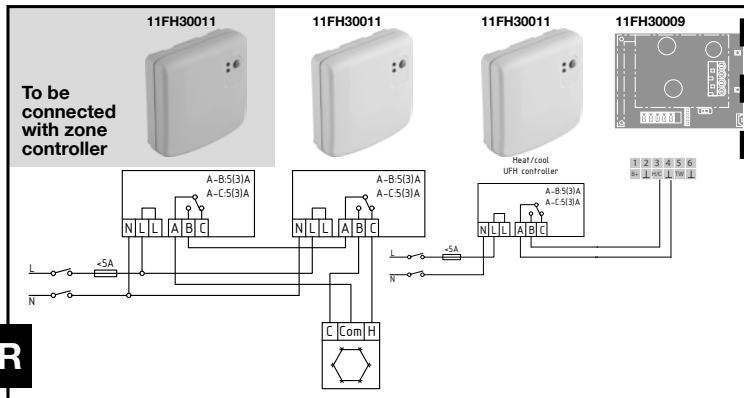

VASCO RF ROOM THERMOSTAT (11FH55041)

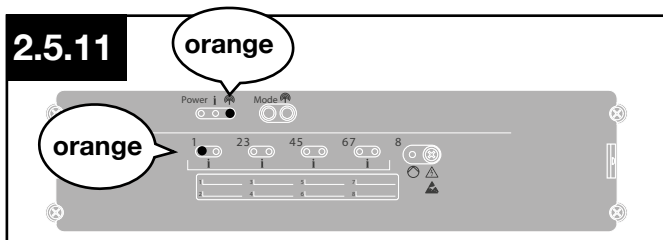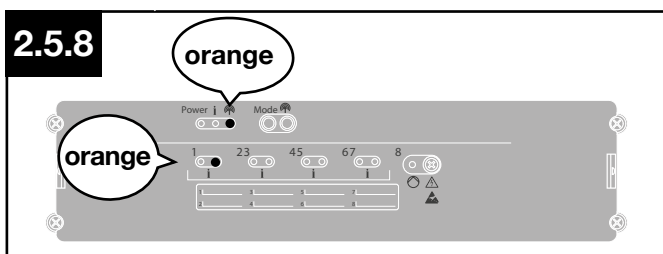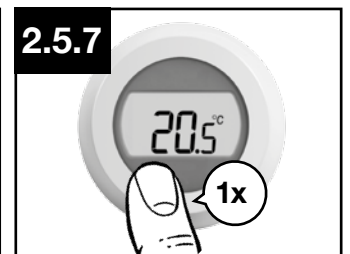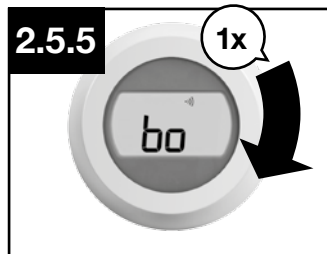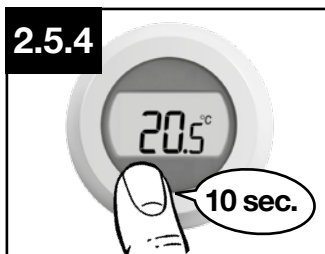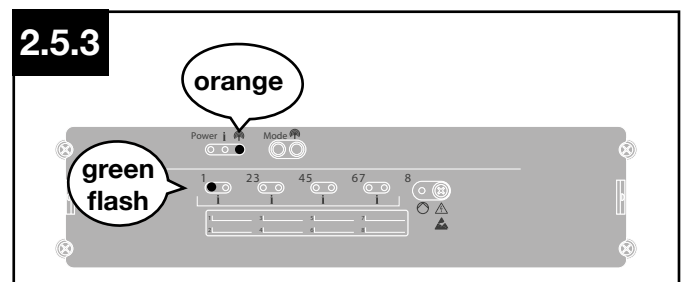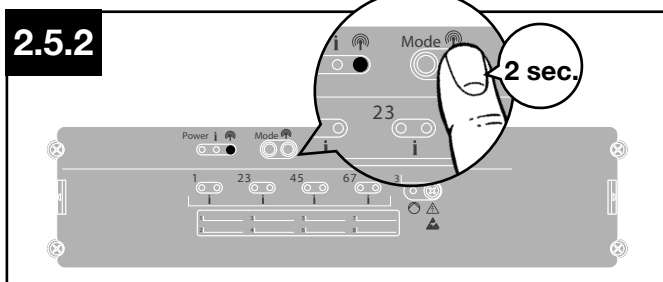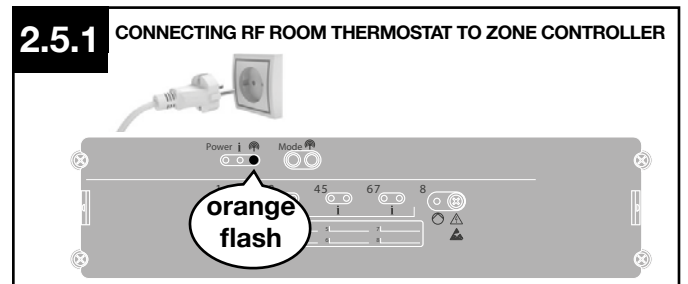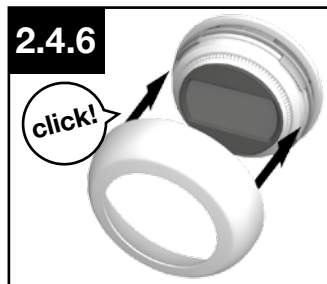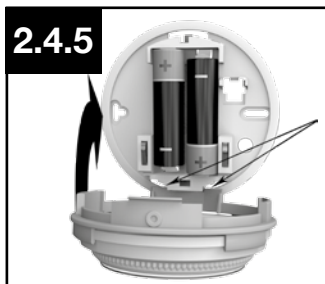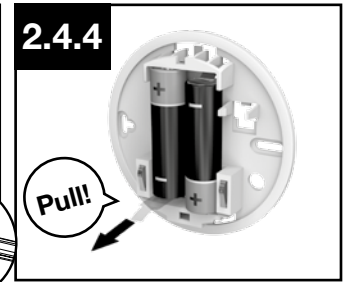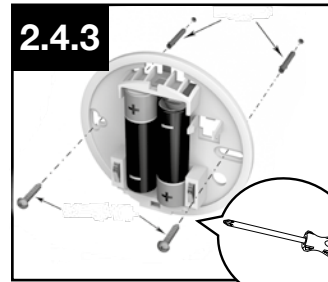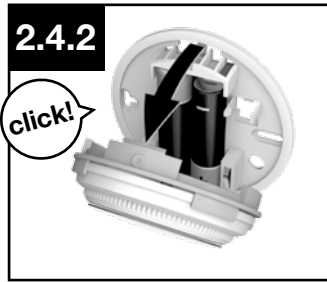


CONNECTING
NEXT RF ROOM THERMOSTAT




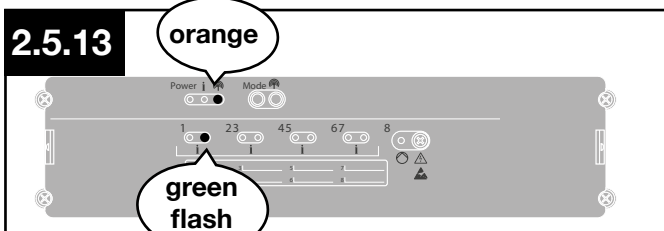
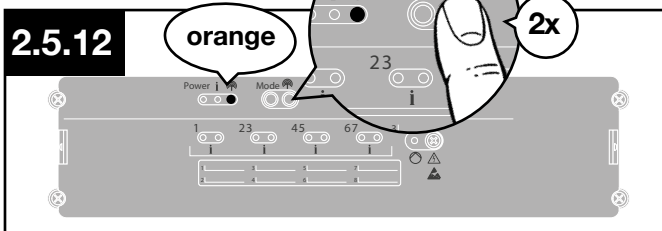


TO EXIT: PRESS REPEATEDLY UNTIL 'POWER' LED = GREEN


**REPEAT STEP 2.5.4 TO 2.5.13
TO CONNECT NEXT ZONE**

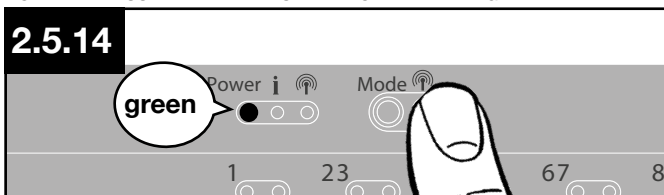

CONNECTING OPTIONAL HEATING/COOLING SOURCE RELAY (see step 2.3 a/b/c)
WITH ZONE CONTROLLER

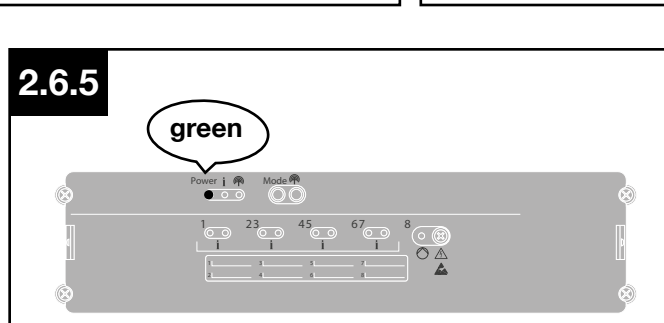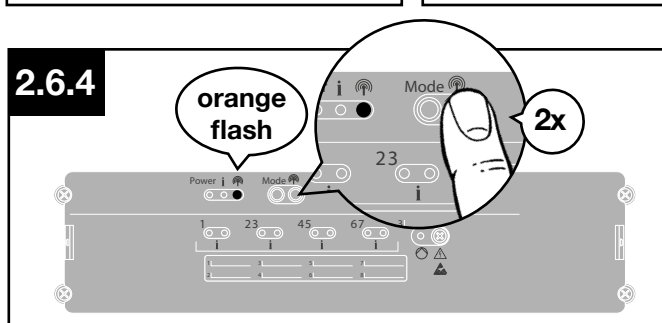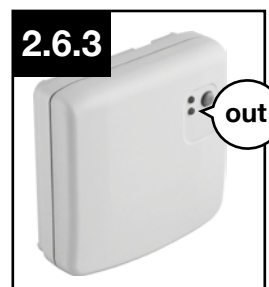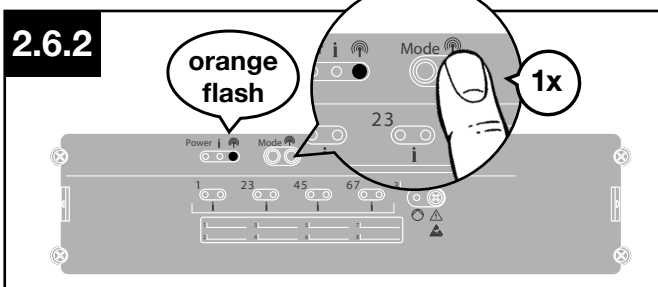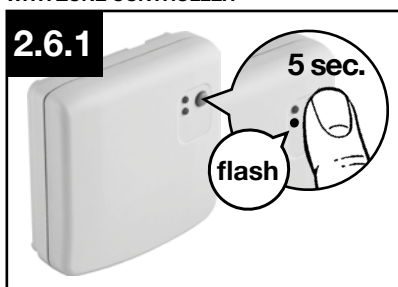

3. VASCO GATEWAY AND APP CONTROL

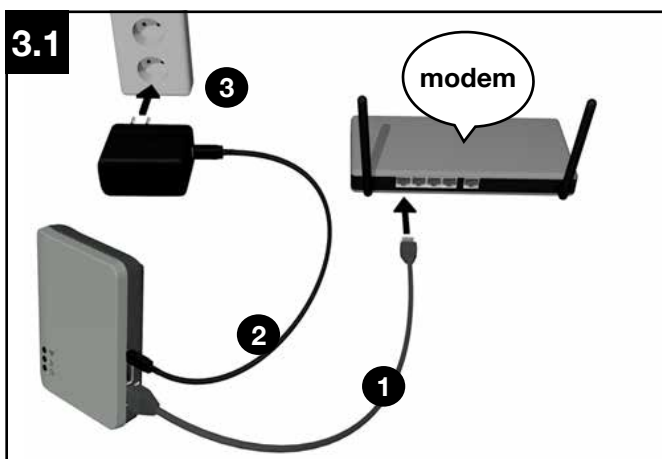

Kruishoefstraat 50
B-3650 Dilsen
T. +32 (0)89 79 04 11
F. +32 (0)89 79 05 00
info@vasco.eu
www.vasco.eu

91.dr017011.B