

Mounting frame

DX4/5/6

Description


The mounting bracket is designed for freestanding installation of Vasco DX ventilation units and is available in both horizontal and vertical versions.

Thanks to their stable, low-vibration and secure mounting base, DX units can be installed easily, ergonomically and flexibly in a wide variety of indoor spaces.

Thanks to its robust design, the bracket ensures optimum support, both during installation and during long-term use.

Technical features

- **Stability:** ensures a sturdy and secure installation with wear-resistant painted galvanized steel of 1.25 mm.
- **Easy maintenance:** easy to reach for maintenance and repairs.
- **Noise reduction:** reduces vibrations and noise pollution due to the rubber feet.
- **Verstelbare hoogte:** ideale hoogte-instelling tussen 396 mm en 426 mm, ook geschikt voor oneffen vloeren.
- **Horizontal or vertical configuration:** available in a horizontal or vertical version

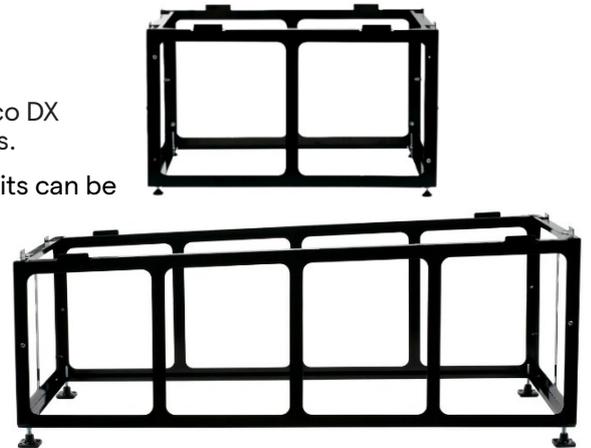

Safety and User Instructions

Follow the guidelines below to ensure safe installation and proper use of the mounting bracket:

Compatibility

- Use this mounting bracket only in combination with the Vasco DX4/5/6 (E) ventilation units.

Placement

- Place the frame on a stable and flat surface.
- Do not apply additional ballast or weight to the frame outside of the ventilation unit designed for this purpose.


Safety and Supervision

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed by a person who is responsible for their safety.
- Supervise children to prevent them from playing with the device or the mounting plate.



Mounting frame

DX4/5/6

Vertical installation overview (parts + dimensional drawings)

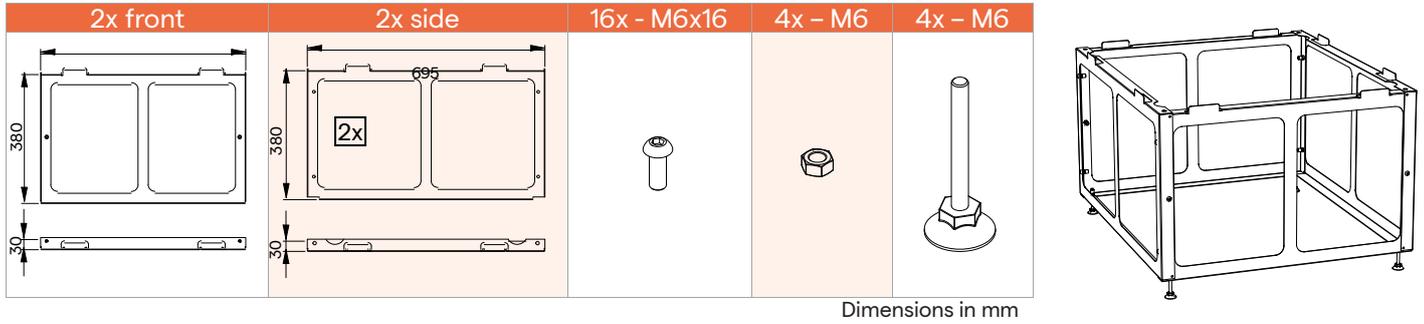


Vertical mounting instructions

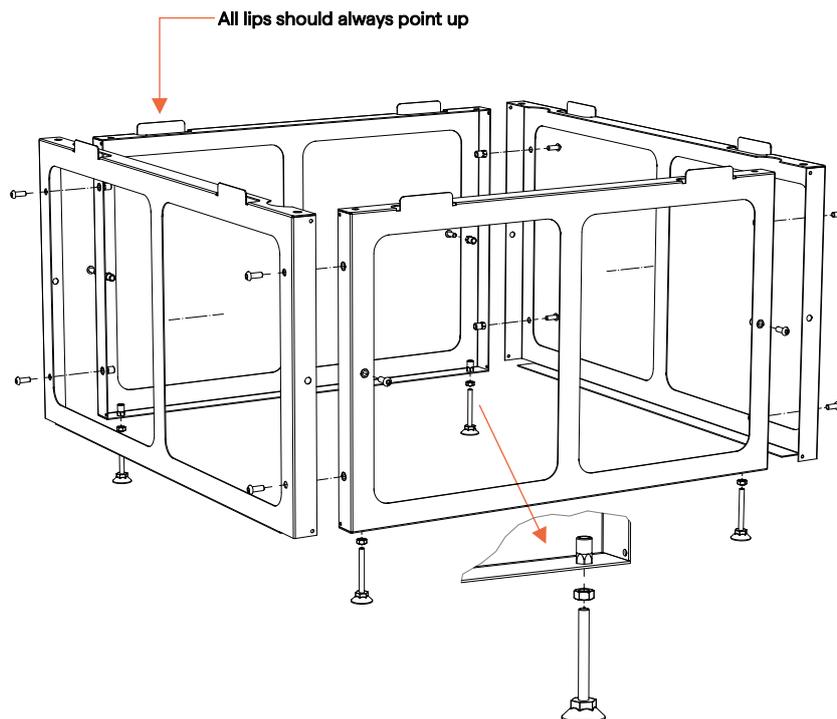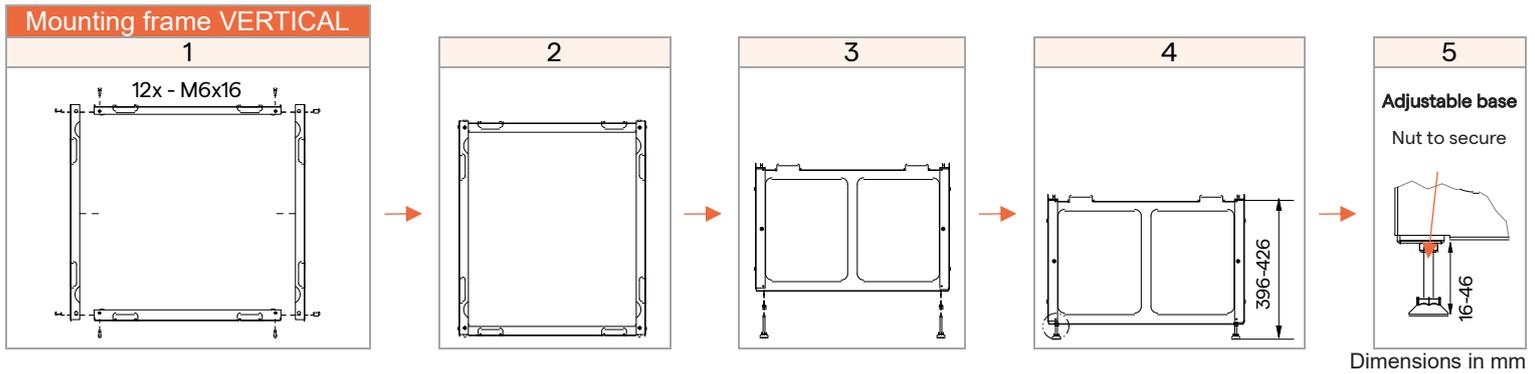

Mounting frame

DX4/5/6

Horizontal assembly overview (parts + dimensional drawings)

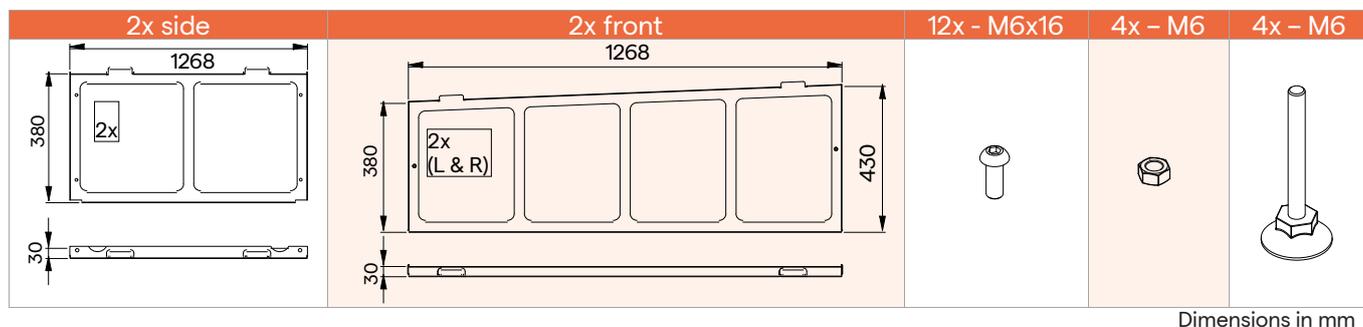

Vertical mounting instructions

